


INSTRUCTIONS FOR USE

It is necessary to pour oil into the multiplier before the first use, according to the amount shown in the table (oil quantity) or with the measuring indicator on the multiplier. All multipliers are available without lubricating oil!

During operation, the oil temperature rises by 40°C to 50°C (the difference between the operating temperature and the ambient temperature).

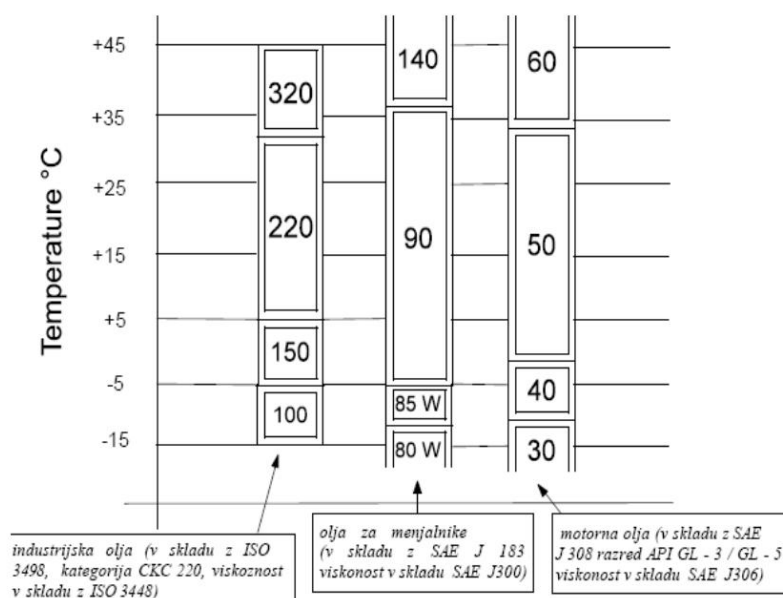

The oil must be of good quality and from the same manufacturer. It is necessary to pour the so-called gear oil.

The oil must be changed for the first time after 50 hours of operation and then every 1000 hours of operation or every 6 months. It is recommended to check the oil level at least once a month.

Series	Mounting position	Amount of oil required (L)
GR.2	 1 2 3	1 - 0,15 2 - 0,11 3 - 0,09
GR.3	 1 2 3 4	1 - 0,34 2 - 0,80 3 - 0,52 4 - 0,75